



## remote control - 8 ZONES control LENNY-MD-089



### Smart LED control system

New smart LED **color control system** with 2.4GHz remote control.

**Auto synchronisation** and **auto transmission** functions.

The device adopts low power consumption technologies and one controller can manage several receivers at the same time.

The system does not produce interference as it uses a very low level transmission signal.

Suitable for simple installations in both domestic and professional environments.

**Owners manual**

## **LENNY-MD-089 8 ZONES control**

Smart LED control system

<b>Technical specifications</b> .....	<b>3</b>
<b>Single color</b> .....	<b>5</b>
Remote control functions	
Mobile control	
<b>Tunable white</b> .....	<b>6</b>
Remote control functions	
Mobile control	
<b>RGB</b> .....	<b>7</b>
Remote control functions	
Mobile control	
<b>RGBW</b> .....	<b>9</b>
Remote control functions	
Mobile control	
<b>RGBWW</b> .....	<b>11</b>
Remote control functions	
Mobile control	
<b>Led Strip-controller connection</b> .....	<b>13</b>
<b>System linking and unlinking</b> .....	<b>16</b>
<b>Device auto-sync</b> .....	<b>17</b>
<b>Auto-transmitting function</b> .....	<b>17</b>
<b>Installation diagram - LENNY-TRIAC1</b> .....	<b>18</b>
<b>Mobile phone pairing</b> .....	<b>19</b>
<b>Alexa linking</b> .....	<b>23</b>
<b>Google Home linking</b> .....	<b>24</b>
<b>Google Assistant linking</b> .....	<b>25</b>
<b>Compatibility table</b> .....	<b>26</b>
<b>Table of controls by zones</b> .....	<b>27</b>


## LENNY-MD-089 8 ZONES control

Smart LED control system


### Technical specifications

Remote control	
Model	LENNY-MD-089
Voltage	3V (2 AAA batteries)*
Emitting power	6dBm
Standby current	20uA
Working temperature	-20~60°C
Working frequency	2400-2483.5MHz
Modulation type	GFSK
Aprox. operational distance	30m


\* Not included.

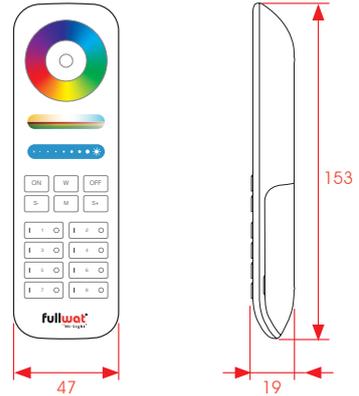


DIRECT CURRENT DRIVERS			
	LENNY-DRV-LS2	LENNY-DRV-WL5	LENNY-DRV-WL2P
Description	5 in 1 receiver	WiFi 5 in 1 receiver	WiFi 2 in 1 receiver
Voltage	DC12V~24V (terminal block & jack plug inputs)		
Output max. current	6A per channel		12A per channel
Total current	15A		12A
Working temperature	-20~60°C		-10~40°C
Working frequency	2.4GHz		
Aprox. operational distance	30m		
Connection mode	Common anode		
WIFI	Requires gateway LENNY-WIFOX1	Included	

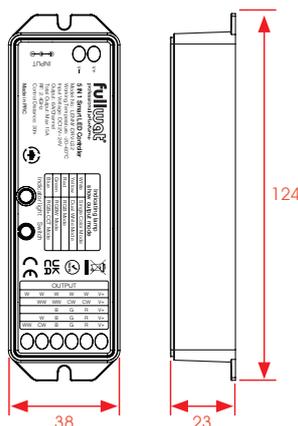

LENNY-DRV-LS2

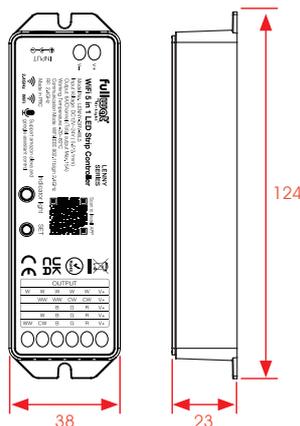

LENNY-DRV-WL5

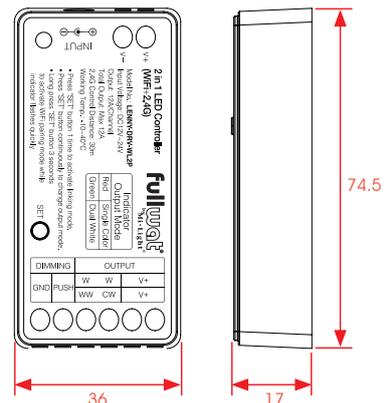


LENNY-DRV-WL2P

## LENNY-MD-089 8 ZONES control


Smart LED control system

### Technical specifications

ALTERNATE CURRENT DRIVER		TRIAC controller
Model	LENNY-TRIAC1	
Input voltage	AC 100-240V 50/60Hz	
Output voltage	AC 100-240V	
Output current	MAX 1.36A	
Output power	150W@100VAC; 300W@240VAC	
Regulation method	Wireless RF, push button, APP	
RF range	30m	
Working temperature	-10-40°C	
WIFI	Requires gateway LENNY-WIFOX1	

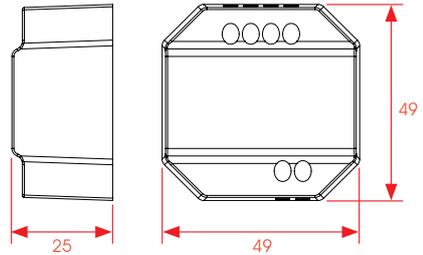

WIFI GATEWAY	
Model	LENNY-WIFOX1
Working voltage	DC5V/500mA (Micro USB)
Working temperature	-20~60°C
Communication	WiFi-IEEE 802.11b/g/n 2.4GHz
Working frequency	2.4GHz
Transmission power	6dBm

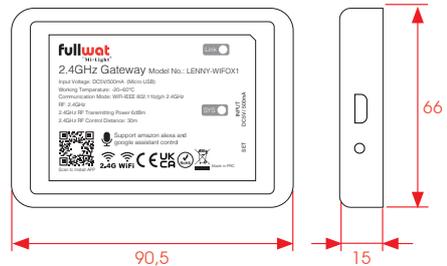

\* Suggested AC/DC adaptors (not included): MWMU10GS  
FU-ADPY10-5-USB

## LENNY-MD-089 8 ZONES control

Smart LED control system


### SINGLE COLOR

#### Remote control functions: LENNY-MD-089

To regulate LED strip, we must use "brightness regulation" bar. Use "ON" and "OFF" keys to switch LED strips on and off.


-  Brightness control.
- ON 8 zones ON.
- OFF 8 zones OFF.
- W Exit programmed modes.
- M Programmed modes.
- Selected zone ON.  
Also used to link and unlink driver from this zone.
- Selected zone OFF.

**Note:** We need one driver unless per each zone we want to control.

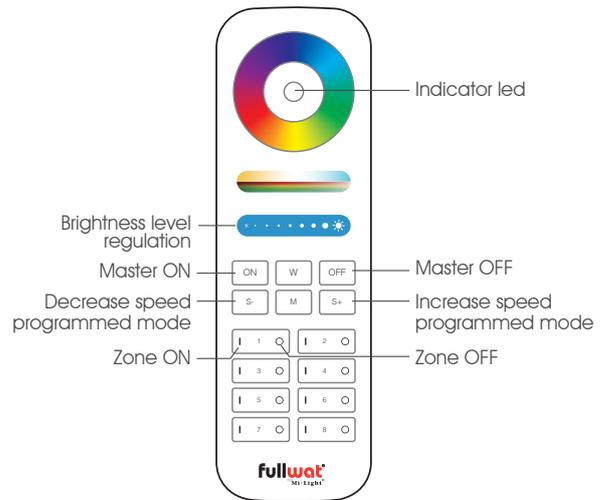

#### Mobile control

For control via mobile phone, Alexa, Google Home or Google Assistant, a WIFI gateway is required, either built into the receiver or using the LENNY-WIFOX1 gateway.

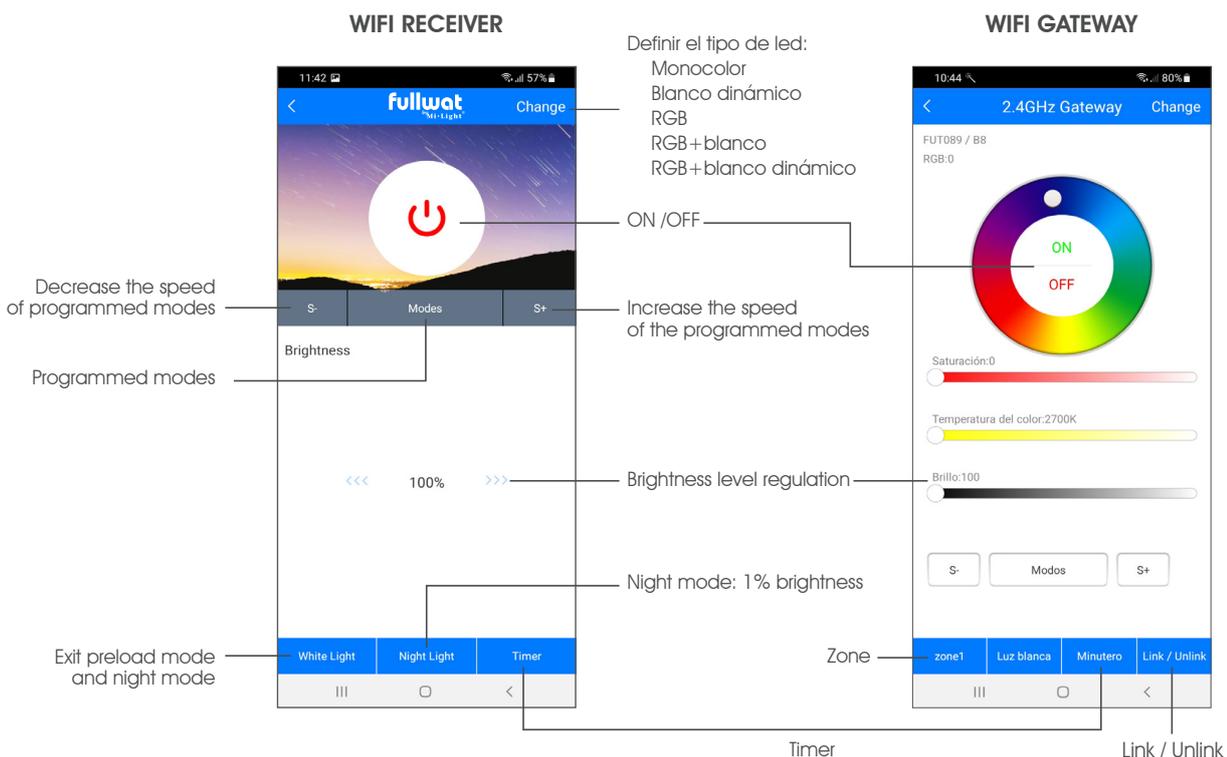

# LENNY-MD-089 8 ZONES control


Smart LED control system

## TUNABLE WHITE

### Remote control functions: LENNY-MD-089

On the remote control, use slide bar "dynamic white" to switch between different white tones. To regulate LED strip, we must use "brightness regulation" bar. Use "ON" and "OFF" keys to switch LED strips on and off.

-  Brightness control.
-  Dynamic white regulation
- ON 8 zones ON.
- OFF 8 zones OFF.
- W Exit programmed modes.
- M Programmed modes.
- I Selected zone ON.  
Also it is used to link and unlink every drive from this zone.
- O Selected zone OFF.

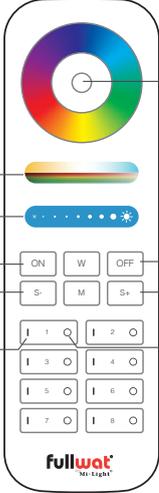


- Indicator led
- Dynamic white
- Brightness level regulation
- Master ON
- Decrease speed programmed mode
- Zone ON
- Master OFF
- Increase speed programmed mode
- Zone OFF

**Nota:** We need one driver at least per each zone we want to control.

### Mobile control


For control via mobile phone, Alexa, Google Home or Google Assistant, a WIFI gateway is required, either built into the receiver or using the LENNY-WIFOX1 gateway.

#### WIFI RECEIVER

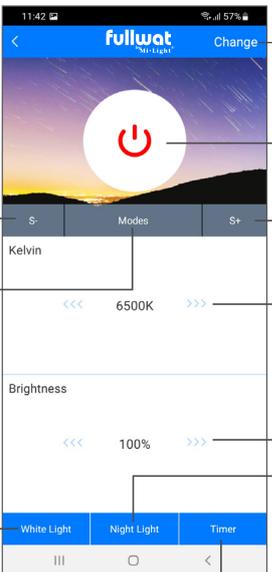

- Define LED type:
  - Single color
  - Tunable white
  - RGB
  - RGB+white
  - RGB+tunable white
- ON /OFF
- Increase the speed of the programmed modes
- Change color temperature if our system is ready to support such function
- Brightness level regulation
- Night mode: 1% brightness
- Exit preload mode and night mode

#### WIFI GATEWAY

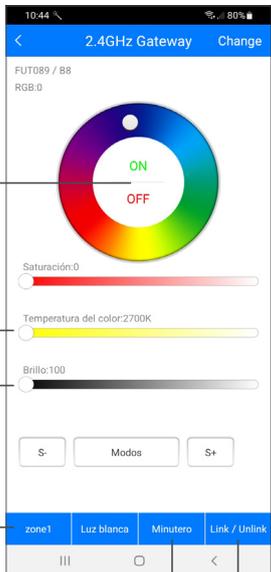


- Decrease the speed of programmed modes
- Programmed modes
- Brightness
- Zone
- Timer
- Link / Unlink

## LENNY-MD-089 8 ZONES control

Smart LED control system

### RGB

#### Remote control functions: LENNY-MD-089

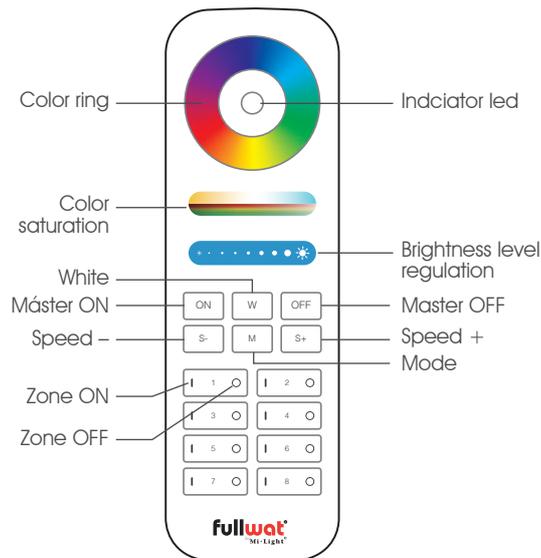

 Slide your finger over the coloured ring to change colors.

 Color brightness level and white changing.

 Color saturation level

ON 8 zones ON.

OFF 8 zones OFF.

W White colour output with R+G+B. combination.

M Dynamic modes.

S+ Under dynamic mode running, you can get light running faster with this switch.

S- Under dynamic mode running, you can get slow speed with this switch.

I Selected zone ON. Also used to link and unlink driver from this zone.

O Selected zone OFF.

**Note:** We need one driver at least per each zone we want to control.

#### Working mode

- **Select color:** Touch color wheel on desired color (e.g. blue).
- **Color saturation:** Adjust color saturation (0% chosen color, 100% very saturated color).
- **Brightness bar:** Adjust brightness level.
- **White:** With any color selected from color wheel, click on "W" to set full white with R+G+B mixing.
  - Brightness slide bar: White brightness level setting.
  - Tunable white: Once white activated, use "color" "saturation bar" to set different white tones from RGB leds mixing.

## LENNY-MD-089 8 ZONES control

Smart LED control system

### RGB

#### Mobile control

For control via mobile phone, Alexa, Google Home or Google Assistant, a WIFI gateway is required, either built into the receiver or using the LENNY-WIFOX1 gateway.



#### Working mode


- **Select color:** Touch color wheel on desired color (e.g. blue).
- **Saturation:** Adjust color saturation (0% chosen color, 100% very saturated color).
- **Brightness level:** Adjust brightness level.
- **White color:** Bring out white color using R+G+B mixing combination (If maximum level is required, set saturation bar at highest level).
- **Tunable white:** System allows to simulate dynamic white levels using RGB leds.

## LENNY-MD-089 8 ZONES control

Smart LED control system

### RGBW

#### Remote control functions: LENNY-MD-089

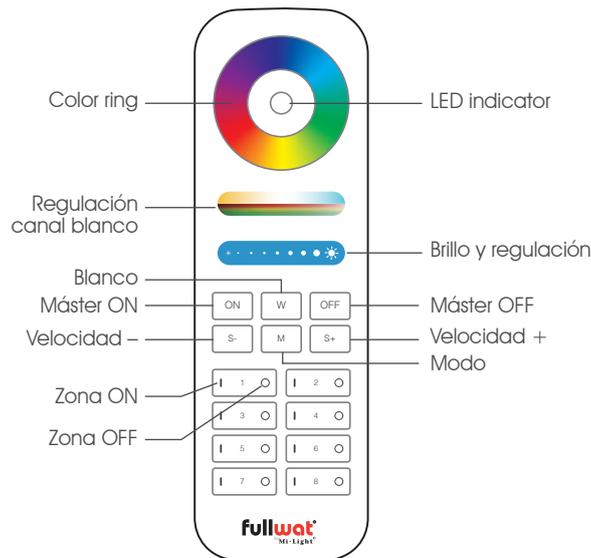

 Slide your finger over the coloured ring to change colors.

 Color and white brightness control.

 With an active RGB colour, add "White" channel and dim only this one. In case you want to dim RGB and white at the same time, set white to maximum brightness and use the "brightness and dimming" bar.

8 zones ON.

8 zones OFF.

Turn on white channel (from 4th channel). To dim the white, the "brightness and dimming" bar must be used. It is not possible to achieve white with the combination of R+G+B.

Dynamic modes.

Under dynamic mode running, you can get light running faster with this switch.

Under dynamic mode running, you can get slow speed with this switch.

Selected zone ON. Also used to link and unlink driver from this zone.

Selected zone OFF.

**Note:** One driver is necessary per every zone.

#### Working mode

- **Select color:** Touch color wheel on desired color (e.g. blue).
- **Brightness level:** Adjust brightness level.
- **White activation only:** Select color on the color wheel, push on "W" to set pure white.
- **Color+White activation:** Set desired color on the color wheel then adjust white with saturation slide bar (0% on the left side, then white channel OFF, 100% on the right side, then white fully ON).  
–Note: Once brightness level has been selected, if we push "W" then it will be switched ON at selected level.
- **Color + White and selected color cancelation:** Push W.
- **Color + White and white setting cancelation:** White channel slide bar on the left (0%).

## LENNY-MD-089 8 ZONES control

Smart LED control system

### RGBW

#### Mobile control

For control via mobile phone, Alexa, Google Home or Google Assistant, a WIFI gateway is required, either built into the receiver or using the LENNY-WIFOX1 gateway.



#### Working mode


- **Select color:** Touch color wheel on desired color (e.g. blue).
- **"Saturation" bar:** Adjust color saturation (0% chosen color, 100% very saturated color).
- **Brightness level:** Adjust brightness level.
- **White light:** Only white channel activation set.  
– The "Brightness slide bar" is used to set desired brightness level.
- **Color + White activation:** Choose color with "color slide wheel" and set white level with saturation bar (0% white channel off, 100% white channel set at max level).
- **Color + tunable white and turn off white:** We lower the saturation to 0%.
- **Remove Color + white and Color levels:** Press "White light".

## LENNY-MD-089 8 ZONES control


Smart LED control system

### RGBWW

#### Remote control functions: LENNY-MD-089

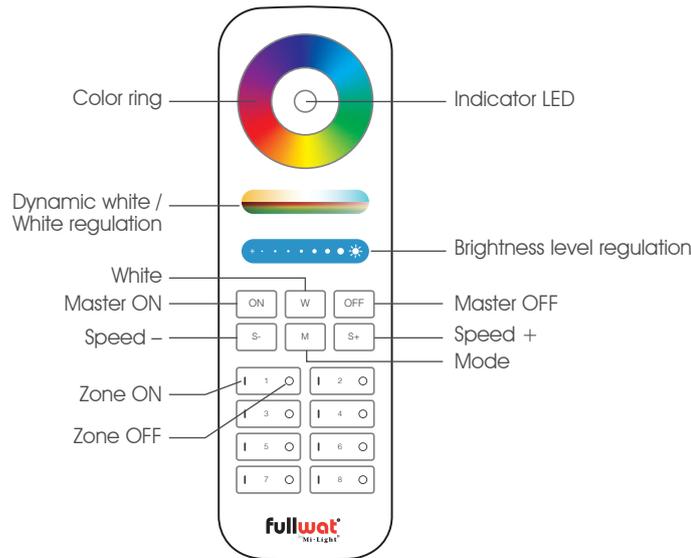

Slide your finger over the coloured ring to change colors.

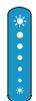

Color and white brightness control.



With an active RGB colour, add "White" channel and dim only this one. In case you want to dim RGB and white at the same time, set white to maximum brightness and use the "brightness and dimming" bar.



8 zones ON.



8 zones OFF.



Activates dynamic white channels. To adjust dynamic white, use "dynamic white" slide bar until desired colour is achieved. If you want to adjust brightness, use "brightness and dimming" slide bar. It is not possible to achieve white with R+G+B combination.



Dynamic modes.



Under dynamic mode running, you can get light running faster with this switch.



Under dynamic mode running, you can get slow speed with this switch.



Selected zone ON. Also used to link and unlink driver from this zone.



Selected zone OFF.

**Note:** We need one driver at least per each zone we want to control.

#### Working mode

- **Select color:** Touch color wheel on desired color (e.g. blue).
- **Brightness level:** Adjust brightness level.
- **Dynamic white control:** Press W key (if other color is selected previously, it will be switched off). Use slide touch "dynamic bar" until your get desired tone.
- **Color + White activation:** Select desired white tone first (see previous steps). Once white shade tone is reached you must choose color using "color wheel".
  - Color + Dynamic white and white removing: Use "dynamic white" bar. 100% on the right (Selected white tone will be turn on at highest level) and 0% on the left (white color is turn off and color selected will remain).
  - Color + Dynamic white and color removing: Press "W" key and set desired white tone. (when you press "W" it will go to 100%)

## LENNY-MD-089 8 ZONES control

Smart LED control system

### RGBWW

#### Mobile control

For control via mobile phone, Alexa, Google Home or Google Assistant, a WIFI gateway is required, either built into the receiver or using the LENNY-WIFOX1 gateway.



#### Working mode

- **Select color:** Touch color wheel on desired color (e.g.blue)
- **Brightness level:** Adjust brightness level.
- **Tunable white:** Slide your finger over "tunable white bar" to get desired white tone.  
– Note: If there is a previous selected level from color slide wheel, it will switch off.
- **Color + Dynamic White:** Choose desired color with slide wheel and adjust white tone desired with saturation bar (0% white channel off, 100% white channel at highest level).  
– Note: If dynamic white color is desired, please firstly set dynamic white mode.
- **Color + dynamic white and turn white off:** Set saturation bar at lowest level 0%.
- **Color + dynamic white and color off:** Select dynamic white tone with "Kelvin grade" bar and color will be switched off.



# LENNY-MD-089 8 ZONES control

Smart LED control system


## Led Strip-controller connection

### Connection drawing

2 in 1 driver **LENNY-DRV-WL2P**


#### SINGLE COLOR

Valid for models:  
DOMOX-2835-XX FU-BLF-XX CCTX-2835-XX  
XX: 2100 / 2300 / 2700 / 3000 / 40000 / 6000K

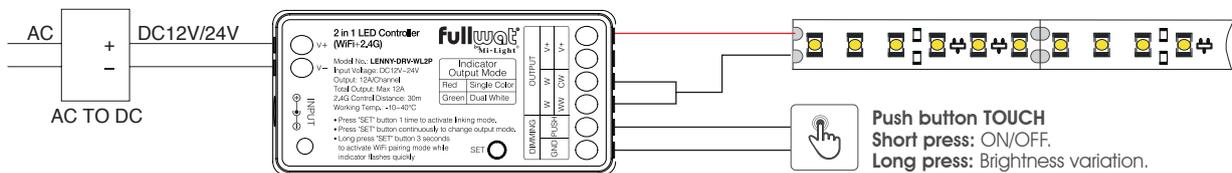


#### TUNABLE WHITE

Valid for models:  
FU-BLF-2835-2165-(W)X

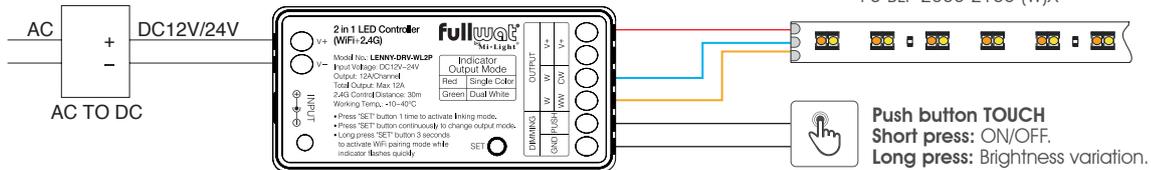

Press "SET" continuously to switch between single color and tunable white mode.

### LENNY-TRIAC1 Push button control

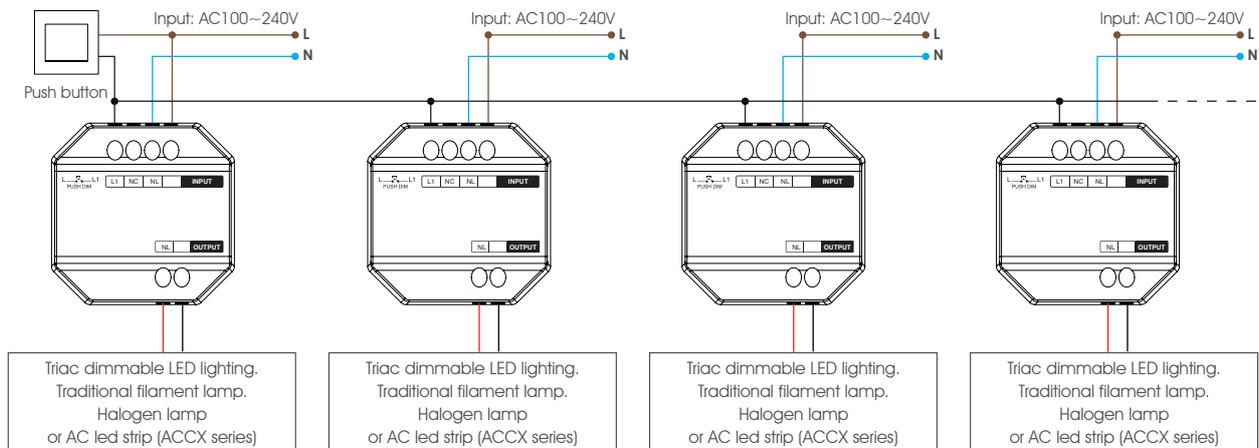

#### Functioning

**Short press:** Switches the connected device ON/OFF.

**Long press (press and hold):** increases or decreases the intensity of the light.

#### Connection

The maximum number of TRIACs is 25 pieces and maximum wiring distance from the push button is 20m.

To control everything with a single push button, LENNY-TRIACs must be connected in cascade according to the connection diagram.

## LENNY-MD-089 8 ZONES control

Smart LED control system

List of LENNY-DRV-LS2 modes and functions for RGB / RGBW / RGBWW

Number	Dynamic mode	Brightness / Saturation / Speed
1	Mardi Gras	Adjustable
2	Automatic colors changing	
3	Sam	
4	Gemma	
5	Twilight	
6	American	
7	Super super Tuesday	
8	Party	
9	Splash colors	

List of LENNY-DRV-WL5 modes and functions for RGB / RGBW / RGBWW

Icon	Dynamic mode	Icon	Dynamic mode	Brightness / Saturation / Speed
	Rainbow		Starlit night	Adjustable
	Swam dancing		Food	
	Carnival		Working	
	Musical show		Relaxing	
	Disco		Reading	
	First love		Sunset	
	Green forest		Good night	
	Trippingly dancing		Night light	

## LENNY-MD-089 8 ZONES control



### Smart LED control system

#### System linking and unlinking

**Note:** The light only works after the controller is paired with one or more receivers.

**Linking.** Place Remote controller close to the desired driver to be paired.

Before starting linking process, configure receiver according to the type of LED strip. Refer to "wiring diagram" section (previous point) from the manual.

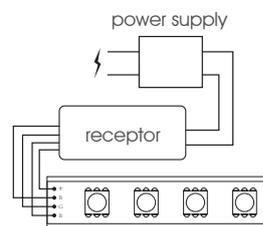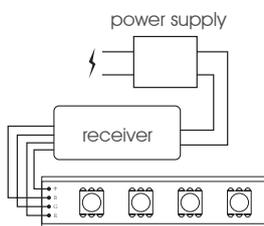

If light does not flash slowly, the bonding is not done. Repeat the process until this occurs.



**1.** Switch off power supply and after 10 seconds, switch it on again.

**2.** Press ON button on the remote control 3 times within a maximum period of 3 sec.

**3.** The light will flash 3 times slowly to indicate successful pairing.

**Note:** For LENNY-DRV-WL2P or LENNY-TRIAC1, press the SET button once to enter pairing mode.

#### Unlinking

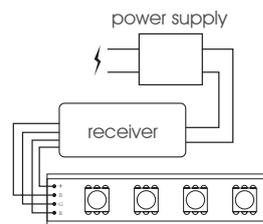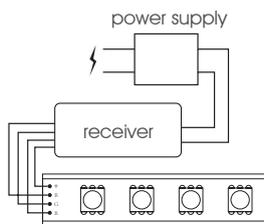

If light does not flash quickly, the bonding is not done. Repeat the process until this occurs.

**1.** Switch off power supply and after 10 seconds, switch it on again.

**2.** Press ON button on the remote control 5 times within a maximum period of 3 sec.

**3.** The light will flash 10 times quickly to indicate that unlinking is successful.

**Note:** For LENNY-DRV-WL2P or LENNY-TRIAC1, press the SET button once to enter pairing mode.

#### Attention


- 1. ⚠ Please check if input voltage is compatible with voltage supported by the driver. Pay special attention not to cross positive and negative poles. Reversed connection will damage the controller.**
2. Do not connect the cables while the power supply is on. Turn it on when you are sure of connections are correct and there is no short circuit is possible.
3. Avoid placing driver controller in areas influenced by electromagnetic fields or close to devices that produce electromagnetic fields. Also, do not place driver controller in areas shielded by metal surfaces or where metal surfaces come between the control and the controller. This would affect operating distance effectiveness.

## LENNY-MD-089 8 ZONES control

Smart LED control system

### Device auto-sync

Different receiver drivers can be connected to operate with the same remote controller and operate in the same modes.

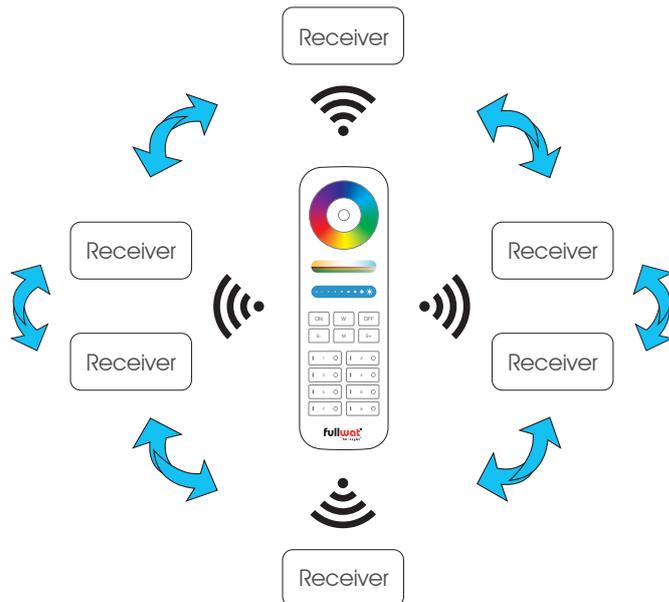


**Notes:**

1. : Self emitting indication.
2. Remote driver controllers can be paired with the same remote controller within a maximum range of 30 meters. (possible where as free or semi-free spaces and without too many obstacles or walls).

### Auto-transmitting function

A single remote controller may transmit control signals in succession to other driver controllers provided if maximum coverage distance of 30m is respected between them.



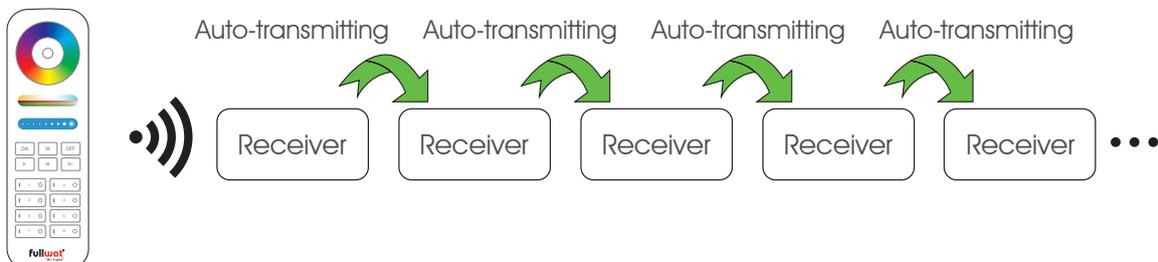


## **LENNY-MD-089 8 ZONES control**

Smart LED control system

### Installation diagram - LENNY-TRIAC 1

---

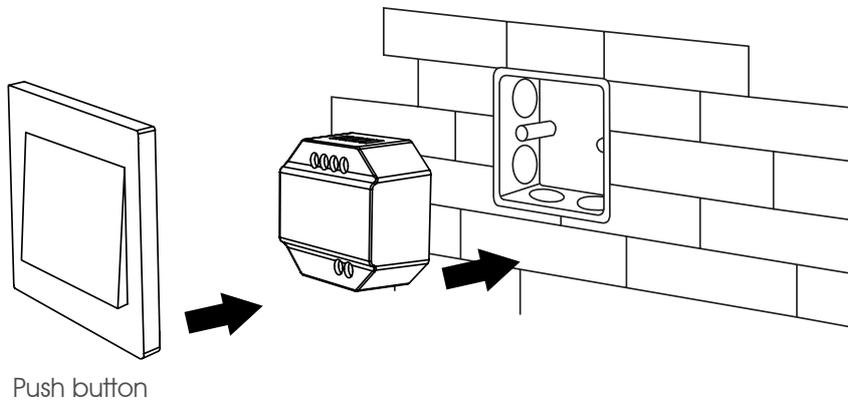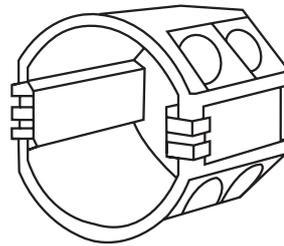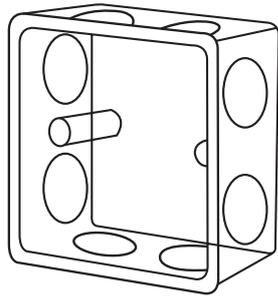

## LENNY-MD-089 8 ZONES control

### Smart LED control system

#### Mobile phone pairing

Download and install the application on your mobile phone:

- Via QR code
- Searching the Play Store for "MiBoxer".




**Note:**

Also compatible with the application: SMART LIFE


To link our installation with our mobile phone, we will need one of these drivers:

- LENNY-DRV-WL5
- LENNY-DRV-WL2P
- LENNY-DRV-LS2 + LENNY-WIFOX1
- LENNY-TRIAC1 + LENNY-WIFOX1


Register in MiBoxer:

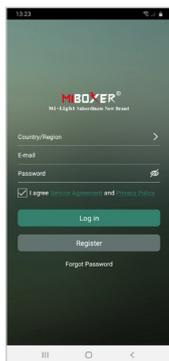

Insert your email address

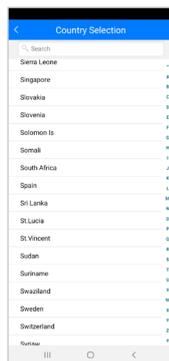

Insert your country

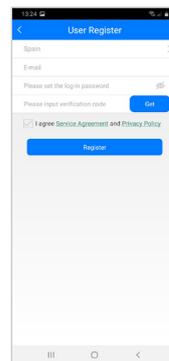

Choose password



Accept conditions and terms


We will receive an e-mail with a registration verification code, which we will have to enter in the application to finish registering account.

In order to use the application, we must activate GPS on our mobile phone (either Android or Apple).

Once on the main screen and our session started, we must add the device. To do this:



Push "+" to add device

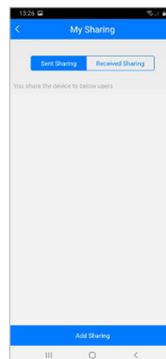

Push "add sharing".

## LENNY-MD-089 8 ZONES control

### Smart LED control system

### Mobile phone pairing

Select device model:



**For model LENNY-DRV-WL5:**

Click on "Smart Strip Controller (WL5)".

**For model LENNY-DRV-WL2P:**

Click on "LED controller (FUT035W-FUT039W)".

**For model LENNY-DRV-LS2 or model LENNY-TRIAC1:**

Click on "2.4GHz Gateway (WL-Box1)".



**For model LENNY-DRV-WL5:**


Disconnect power supply from LENNY-DRV-WL5 for 10 sec.

After 10 seconds, power the controller and within the first three seconds, press and hold "SET" button on the receiver until LED on the receiver flashes.

**For models LENNY-DRV-WL2P / LENNY-DRV-LS2 / LENNY-TRIAC1:**



Press SET button on device or on WIFI gateway for 3 seconds to activate WIFI signal.

In both cases, on the phone screen, click on "Ensure pilot lamp blinking".

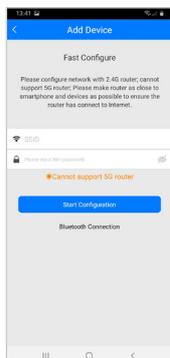

Enter network name and password.

**Attention:** only 2.4GHz network is supported (no 5G) and click on "Start configuration".

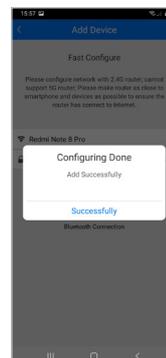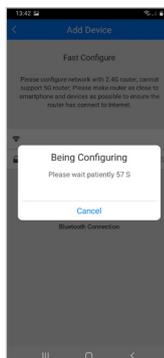


A countdown will appear and once paired, it will indicate that pairing has been successful.

Our device will appear in the list of paired devices.

## LENNY-MD-089 8 ZONES control

### Smart LED control system

### Mobile phone pairing

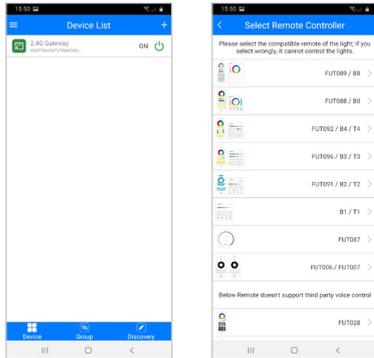


#### Whether we have to use the WIFI gateway (LENNY-WIFOX1):

We must link the driver to be controlled via the APP. To do this, click on 2.4GHz gateway.

First we must choose whether we are going to configure one or more zones. In this case, as it is a zone, we enter the "change" section and select FUT089/B8.

On the screen of our mobile phone we will see image as follows:

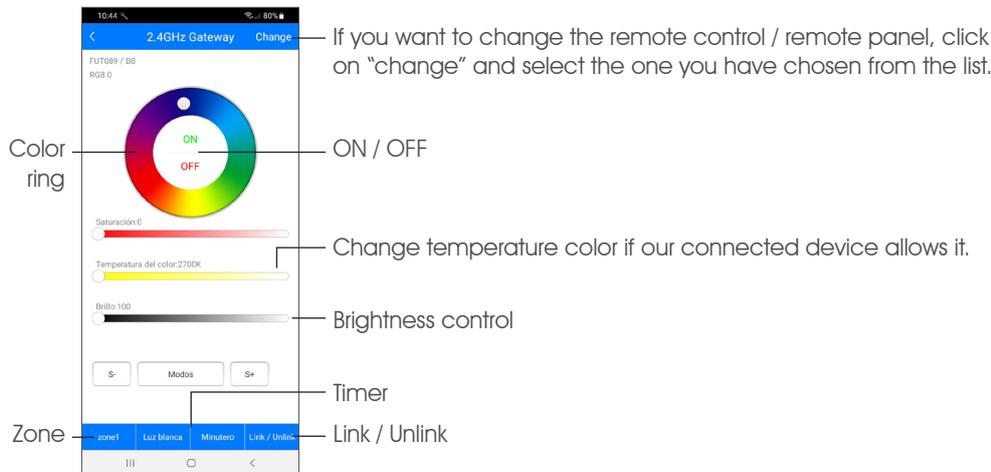

Click on "Link/Unlink".

Click on "link" to link and on "unlink" to unlink.

Remove the power supply to controller for 10 seconds.

After 10 seconds, power the controller and in the first 3 seconds, click on the mobile screen on "link" or "unlink".

The light will flash three times and confirm correct linking.



In the case of unlink, light will flash 10 times for confirmation.

## LENNY-MD-089 8 ZONES control

Smart LED control system

### Mobile phone pairing

The application allows us to create groups with different receivers. This will allow us to control several receivers at the same time: turn ON / OFF / change the color, etc.

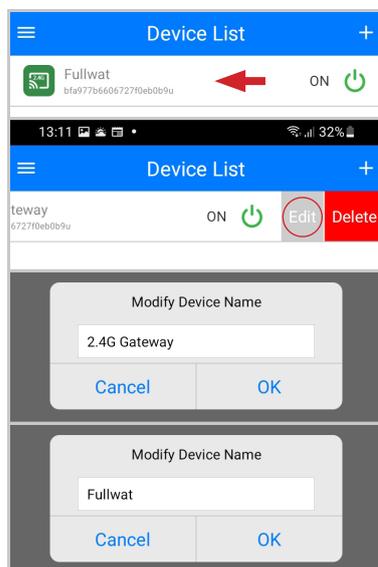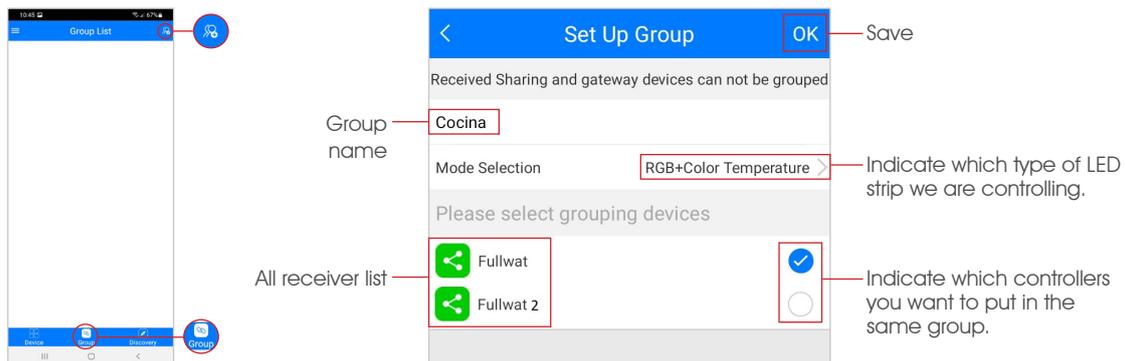

Once we have linked our receiver we can change our device name. This is interesting if we are going to control it with Alexa, Google Assistant or Google Home.

To do so, we press and hold name of the device on the screen and move it to the left. We will see an "edit" and a "delete". Click on "Edit", change the name and "Ok".

# LENNY-MD-089 8 ZONES control

## Smart LED control system

### ALEXA linking

To control system with Alexa, a wifi gateway is required, either built into receiver or using LENNY-WIFOX1 gateway.  
Install Alexa app and log in using your account.  
We need to install Mi-Light Smart skill. To do so:



Click on "more" and select "Skill and games".



In the search engine type "Mi-Light Smart" and click on this option.



We allow application using.



Log in with your MiBoxer data.





If everything is correctly done, we will see a message of successful linking

Once reached step as above, Alexa will detect our receiver automatically and we will be able to change its name, include it in a group or control it by voice.

If receiver is not detected automatically, we can push "detect devices" via Alexa app function.

Now you can work with standard ALEXA managing.

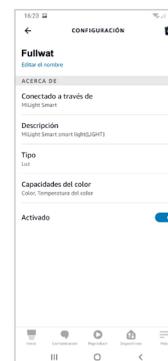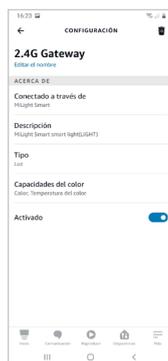

We can rename device to be able to control that device only instead the whole group, command Alexa to turn off/on the device, etc.

## LENNY-MD-089 8 ZONES control


### Smart LED control system

### GOOGLE HOME linking


To control system with Google Home, a wifi gateway is required, either built into the receiver or using LENNY-WIFOX1 gateway.

Install Google Home app and log in with your Google account. If you have not yet configured your home, you can do this now or later.


We need to install Mi-Light Smart skill. To do this:

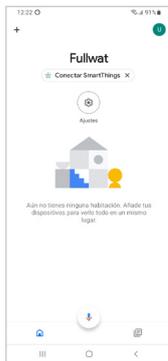

Click on "more".

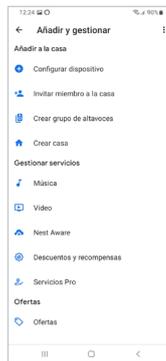

Select "Configure device".

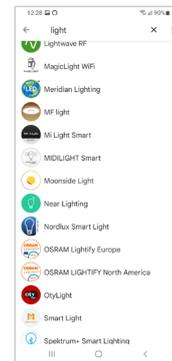

Look for the "Mi-Light Smart" application in the list of applications.



You may get a link warning message. Click on "Link" to accept.



Log in with your MiBoxer data.




If we do it correctly, a successful linking message will appear.


Once we have reached this point, the linking is done.



On the main Google Home screen, our home will appear with our device.

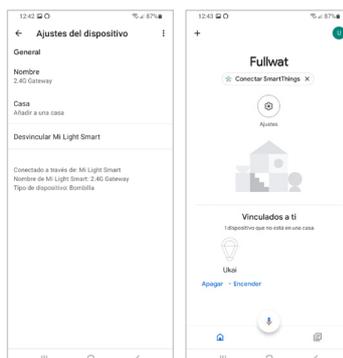

We can rename device to make "name it" easier.

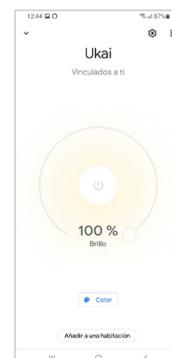

Clicking on the device icon, you are reaching another page where you can control the lights too.



## LENNY-MD-089 8 ZONES control

Smart LED control system

### GOOGLE ASSISTANT linking

---

To control system with Google Assistant, a wifi gateway is required, either built into the receiver or using LENNY-WIFOX1 gateway.

And Install Google Assistant application via PlayStore on your phone:



We must configure it to recognize your voice. Then enter "settings" in the application and click on "Voice Match".

The application will ask you to repeat two phrases several times.

Once this is done, we will be able to "call" our device using "Ok Google". For example, "Ok Google turn on Fullwat" and LED strips connected to Fullwat receiver will light up properly.

## LENNY-MD-089 8 ZONES control

Smart LED control system

Compatibility table

	Single color	CCT	RGB	RGBW	RGBWW	"Mobile app Alexa Google Home"	Zones
<b>LENNY-DRV-LS2</b> <b>LENNY-DRV-LS2S</b>  5-in-1 standard receiver	LENNY-MD-085	LENNY-MD-085				LENNY-WIFOX1 gateway is required	1
	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086		1
	LENNY-MD-087						1
	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088		1
	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0		1
	LENNY-PAN-K1	LENNY-PAN-K1					1
	LENNY-MD-007	LENNY-MD-007					4
	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092		4
	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4		4
	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089		8
	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8		8
<b>LENNY-DRV-WL5</b>  5 in 1 wifi receiver	LENNY-MD-085	LENNY-MD-085				included	1
	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086	LENNY-MD-086		1
	LENNY-MD-087						1
	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088	LENNY-MD-088		1
	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0	LENNY-PAN-B0		1
	LENNY-PAN-K1	LENNY-PAN-K1					1
	LENNY-MD-007	LENNY-MD-007					4
	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092	LENNY-MD-092		4
	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4	LENNY-PAN-B4		4
	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089	LENNY-MD-089		8
	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8	LENNY-PAN-B8		8
<b>LENNY-DRV-WL2P</b>  2 in 1 receiver with wifi and push button	LENNY-MD-085	LENNY-MD-085				included	1
	LENNY-MD-086	LENNY-MD-086					1
	LENNY-MD-087						1
	LENNY-MD-088	LENNY-MD-088					1
	LENNY-PAN-B0	LENNY-PAN-B0					1
	LENNY-PAN-K1	LENNY-PAN-K1					1
	LENNY-MD-007	LENNY-MD-007					4
	LENNY-MD-092	LENNY-MD-092					4
	LENNY-PAN-B4	LENNY-PAN-B4					4
	LENNY-MD-089	LENNY-MD-089					8
	LENNY-PAN-B8	LENNY-PAN-B8					8
<b>LENNY-TRIAC1</b>  Driver TRIAC	LENNY-MD-085					LENNY-WIFOX1 gateway is required	1
	LENNY-MD-086						1
	LENNY-MD-087						1
	LENNY-MD-088						1
	LENNY-PAN-B0						1
	LENNY-PAN-K1						1
	LENNY-MD-007						4
	LENNY-MD-092						4
	LENNY-PAN-B4						4
	LENNY-MD-089						8
LENNY-PAN-B8					8		

## LENNY-MD-089 8 ZONES control

Smart LED control system

### Table of controls by zones

#### 1 ZONE



LENNY-MD-085



LENNY-MD-086



LENNY-MD-087



LENNY-MD-088



LENNY-MD-B0




LENNY-PAN-K1

#### 4 ZONES



LENNY-MD-007

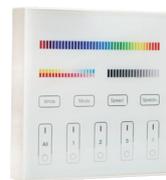

LENNY-PAN-B4



LENNY-MD-092

#### 8 ZONES



LENNY-MD-089



LENNY-PAN-B8